

CARDIO *Theater*

INSTRUCTION MANUAL

xTV9T4 – 900 Mhz 4 Channel Transmitter



xTV9R Receiver



Cardio Theatre Holdings, Inc.
20031 142nd Ave NE
P.O. Box 7202
Woodinville, WA 98072-4002
(800) 776-6695
(425) 486-9292
www.cardiotheater.com

Introduction

CONGRATULATIONS on your choice of this product. Its superior sound reproduction will provide enjoyment and entertainment. We appreciate your patronage and take pride in the quality components our company produces. Please read this manual before you install and operate the system. This manual will acquaint you with operating features and system-connection considerations.

Retain this manual for future reference.

For your records

Record the serial number found on the back of the xTV9T4 Transmitter.
Refer to the serial number whenever you call your dealer for information or service.

Serial Number:

Unpacking

Unpack the units carefully and secure all parts so that none are misplaced. Examine the units for possible damage. If any damage is noticed, notify your dealer immediately. If the system was shipped to you, notify the shipping company without delay. Only the person or company receiving the goods can file a claim against the carrier for shipping damage. We recommend that you retain the original carton and packing materials should you need to transport the system in the future.

Contents

FCC Statement.....	2
Before You Begin.....	3
Important Safeguards.....	4
Suggestions for Installation.....	6
Controls and Indicators.....	7
System Connections.....	9
Attaching xTV Receivers.....	12
xTV9T4 Transmitter Setup.....	13
Transmitter Frequency chart.....	14
Receiver Programming.....	15
Receiver Maintenance.....	16
Specifications.....	17
Warranty.....	18
Technical Support.....	19

FCC Compliance Statement

NOTE: This equipment has been tested and found to comply with the limits for Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult Cardio Theater or an experienced radio/TV technician for help.

WARNING: To Prevent Fire Or Electrical Shock, Do Not Expose These Appliances To Rain, Moisture, or Excess Heat.

Before You Begin

- Please ensure that you have all of the required equipment before disposing of any packing materials.

xTV9T4 Transmitter



XTV9R Receiver

In the quantity ordered



Wire Ties

Quantity – two per receiver



Power Cord

Quantity – one per transmitter



Kit008

Power adaptor and
CSAFE cable
Quantity – as
ordered



CSAFE Cable

Quantity – one per
each Cardio Theater
Ready piece of
equipment



Antenna

Quantity – one per
transmitter




Important Safeguards

Please read all of the safeguards before operating this unit. Follow all warnings placed on the unit and adhere to the operating and use instructions. Retain this manual for future reference.


1. **Power sources** - Connect the unit to a power source only of the type described in the operating instructions or as marked on the appliance.
2. **Power-cord protection** - Route all power-supply cords so that they are not walked on or pinched by items placed upon or against them.



3. **Grounding** - Take precautions so that the grounding or polarization means of the unit are not defeated.
4. **Ventilation** - Position the unit so that its location does not interfere with ventilation. To maintain good ventilation, do not put items on or over the unit. Do not use the unit on a cushioned surface that may block the ventilation openings.

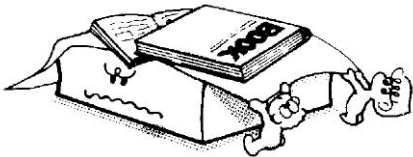


5. **Water and moisture** - Do not locate the unit near water.

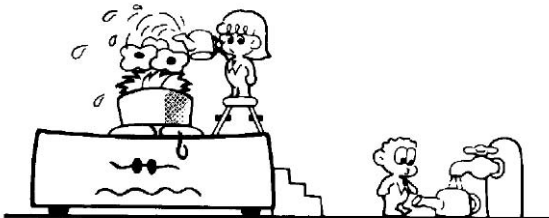


6. **Temperature** - The unit may not function properly if used at extreme temperatures. The ideal temperature is 41°F (5°C) to 87°F (30°C)


7. **Heat** - The unit should be located away from heat sources such as radiators, heat registers, stoves, etc.

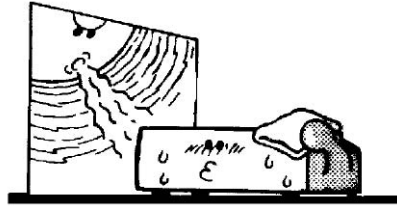

8. **Electric shock** - Care should be taken so that objects do not fall and liquid is not spilled on the enclosure. If a metal object, such as a hairpin or a needle, comes in contact with the inside of this unit, a dangerous electric shock may result.

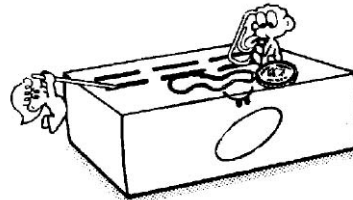


9. **Enclosure removal** - Never open the enclosure. If the internal parts are accidentally touched, a serious shock may occur.

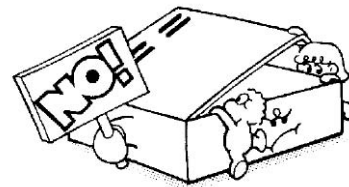

10. **Cleaning** - Use a clean dry cloth. Do not use solvents such as alcohol; paint thinner, etc. to clean the unit.



11. **Abnormal smell** - If an abnormal smell is detected, immediately turn the power OFF and disconnect the power cord. Contact your dealer or service center.

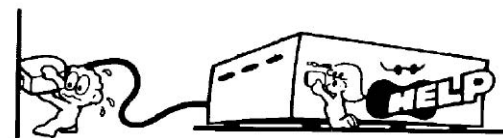

Important Safeguards - Continued

12. Stands - Any component stand should be moved with care. Quick or excessive force would cause the stand to overturn



13. Nonuse periods – The power cord should be disconnected when left unused for a long period of time.

14. Damage requiring service – The unit should be serviced by a qualified Cardio Theater technician when:

- A. The power cord or the plug has been damaged.
- B. Objects have fallen on, or liquid has been spilled into the unit.
- C. The unit does not appear to operate normally or exhibits a marked change in performance.
- D. The unit has been dropped or the enclosure damaged.

15. Servicing – The user should not attempt to service the unit beyond that described in this manual. All other servicing should be referred to a qualified technician.

Safety Precautions

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO A QUALIFIED CARDIO THEATER TECHNICIAN.

THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SIGNIFICANT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.

THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE UNIT.

Suggestions for Installation

General Information


- Group the audio components in a single location to minimize cabling in the cardiovascular room.
- If the audio components are stacked in a stereo cabinet, ensure there is adequate ventilation.
- Place the xTV9T4 transmitter in a well-ventilated area with the front and back easily accessible.
- Place the transmitter antenna eight to twelve feet (8'-12') from the floor to obtain the best possible transmission range.
- Make sure the antenna is in the vertical position **and within line of site to each receiver.**
- The range of the xTV9T4 transmitter is a line of sight (300-foot diameter) from the transmitter antenna. (I.e., if you're within 150 ft. and can physically see the antenna, you should have good reception.)
- By adjusting the transmitters to transmit on different frequencies, you can have multiple xTV9T4 transmitters in the same location. Up to 32 channels with the xTV product line and up to 52 with the older LCS product line (out of production).
- Place the transmitter and audio equipment in a central location for best transmission coverage of the room.

xTV9R Receiver

- When attaching xTV Receivers to equipment, take care not to interfere with the normal operation of the equipment. If the xTV Receiver is connected to a Cardio Theater ready piece of cardiovascular equipment, the connection should not interfere with normal operation.
- If attaching the xTV Receiver to a control panel, avoid covering controls or indicators.
- Attach the xTV Receivers securely with the wire ties and 2" neoprene mounting pad provided. You should not be able to rotate the receiver when it is properly attached. This is very important to prevent moisture and perspiration from entering the receiver through the headphone jack or power connector on the back of the unit.


Controls and Indicators

xTV9T4 Transmitter - Front

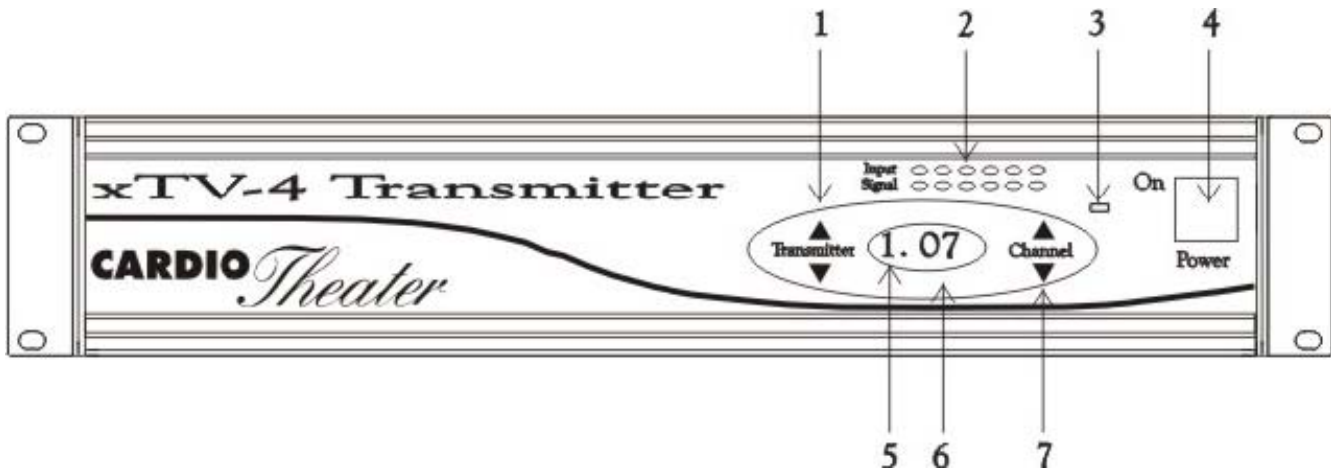

1. **Transmitter Select** – Used to select transmitter output, 1-4 (program mode only).
2. **Input Signal** – For viewing audio input levels.
3. **Power-on Indicator** - Lights when main power switch is on.
4. **On / Off Switch** – Turns power on or off to transmitter
5. **Transmitter indicator**- Displays current transmitter selected for adjustment (program mode only).
6. **Channel Indicator** - Indicates current channel
7. **Volume Indicator** – Indicates volume level selected.

xTV9TX 4 Channel Transmitter – Back

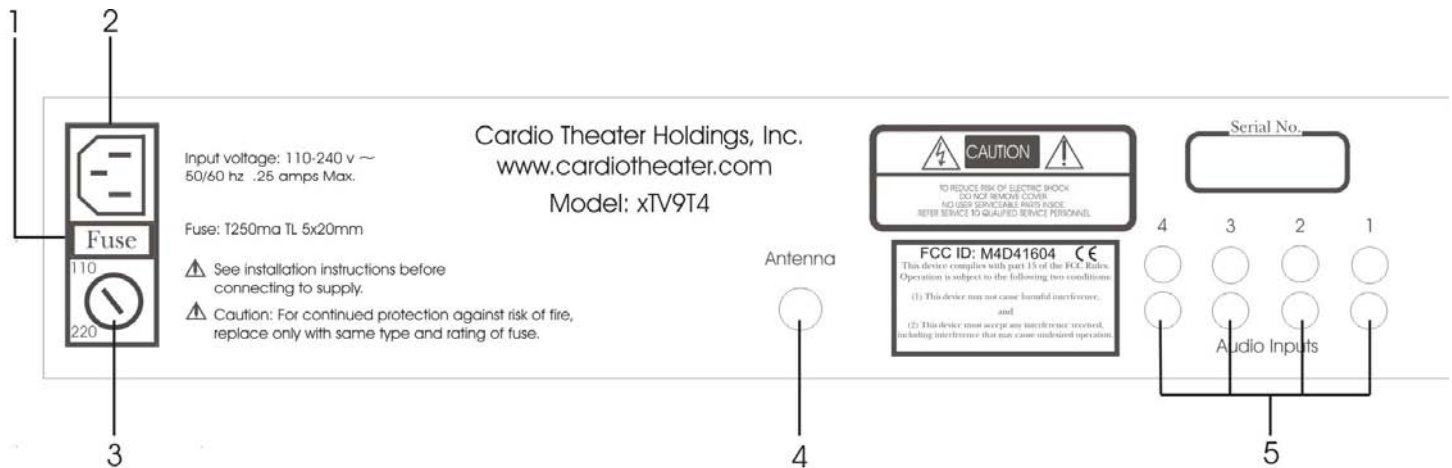

1. **Main Line Fuse** - Main system fuse for the transmitter, T250ma time lag 5x20mm.
2. **Power Input Connector** - The power-input connector brings 120 Volts 60 Hz AC into the system.
3. **110 / 220 volt selector switch** – Changes input voltage to the transmitter.

⚠ Caution: Make sure that the 110/220-volt selector is in the proper position before applying power

4. **Antenna Connector** - Connector for transmitter antenna.
5. **Audio Input Connectors**- Stereo RCA audio input connectors for cables from audio components.

Controls and Indicators

xTV9 Receiver



1. **Channel Display** - Indicates current channel selected.
2. **Channel Select** - To select the desired listening channel.
3. **EQ Tone** - Adjusts audio to predefined EQ settings
4. **Volume Adjust** - To select desired listening volume.
5. **Mute/Programming** - Audio mute. Also used for putting unit into program mode.

System Connections

Transmitters

NOTE: MAKE ALL CONNECTIONS TO THE TRANSMITTER AND RECEIVERS WITH POWER OFF.

- Step 1** Connect the antenna to the antenna connector on the back of the xTV9T4 transmitter.
- Step 2** Connect up to four (4) audio components to the stereo input jacks on the back of the xTV9T4 transmitter.
- Step 3** Use the power cord supplied to connect the transmitter to AC power.

Caution: Make sure that the 110-220 volt selector switch is on the proper position before plugging unit in to AC outlet

- Step 4** ALL TV's need **external speakers off**, not muted.

Receiver Power Connections

There are two (2) configurations for applying power to the xTV Receivers.

Contact the manufacturer of the cardiovascular equipment to determine if the unit is Cardio Theater ready or can be retrofitted. The Cardio Theater Service Center can also be a source of information for this and can be contacted at (800-776-6695). This will determine whether we send power adapters or CSAFE cables for your system.

xTV Receiver with AC power adapter (wall bug)


For cardiovascular equipment that is not Cardio Theater Ready, power must be supplied via a power adapter (wall bug) connected to a 120-volt outlet. The power adapter is connected to the xTV Receiver by a telephone connector on the back of the unit.

xTV Receiver powered by cardiovascular equipment (CSAFE)

For cardiovascular equipment that is Cardio Theater Ready, power will be supplied via a connector located on the cardiovascular equipment. The xTV Receiver is powered from the machine via an adapter cable that plugs into the receiver and into the cardiovascular piece. There are different adapter cables available for most cardiovascular machines on the market. Your sales person will need to know the make and model of each piece of cardiovascular equipment that will be Cardio Theater Ready or retro-fittable (if you plan to retro-fit) at the time of the purchase of the Cardio Theater system.


System Connections, Transmitter/TV Setup

FRONT

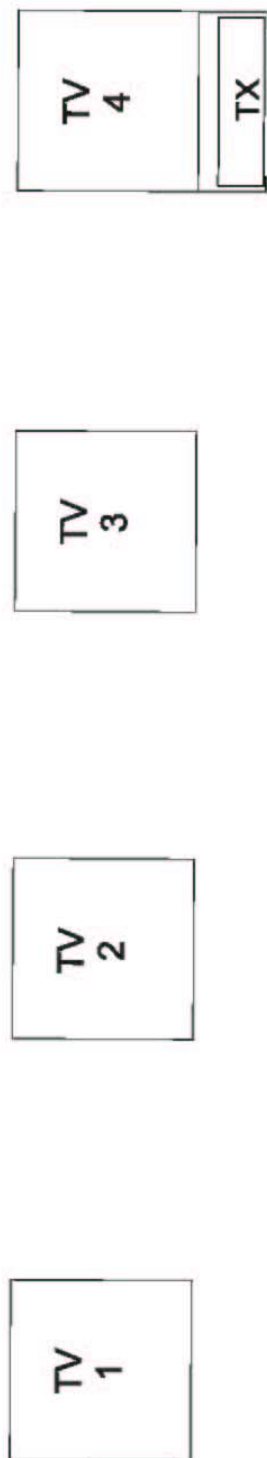


Remember to shut off the television's external speakers.

BACK

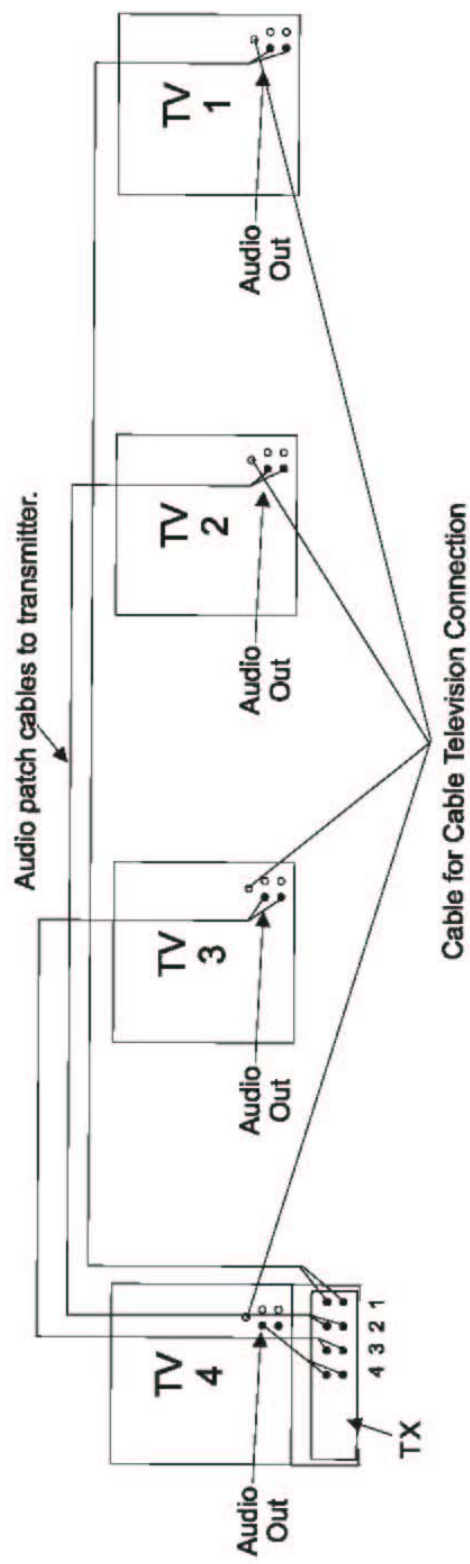


System Connections, Transmitter/Satellite Setup

IF YOU DECIDE TO USE SATELLITE:

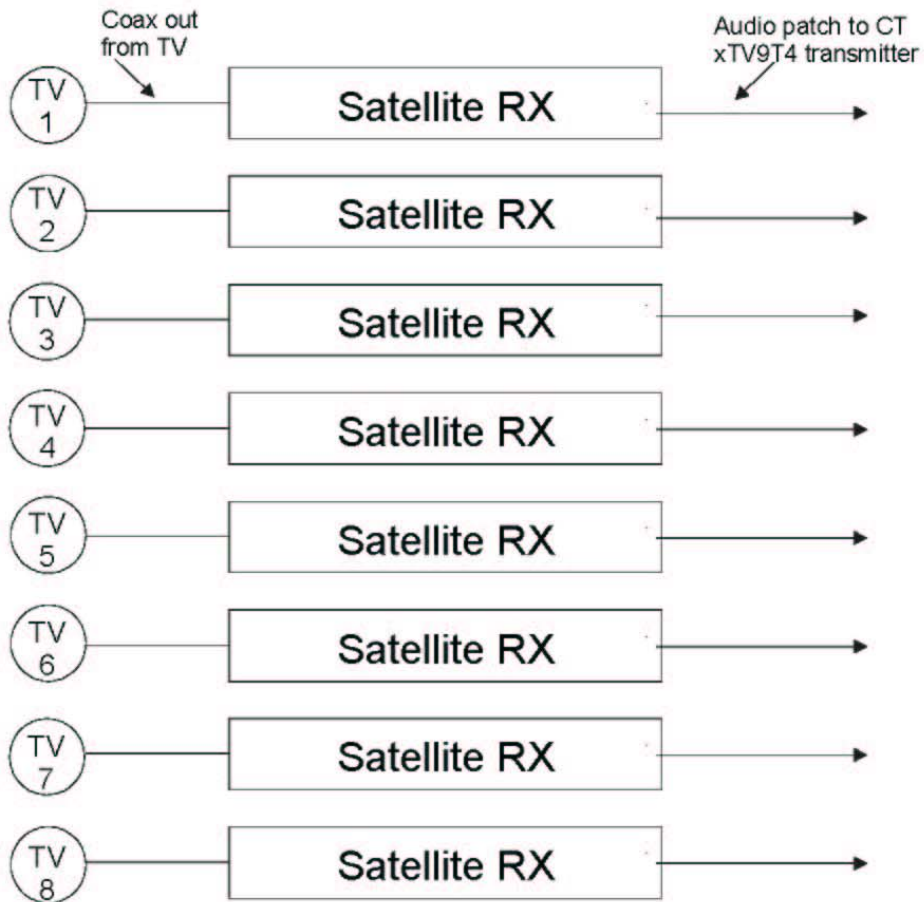

The same configuration applies if you are using cable/satellite music receivers.

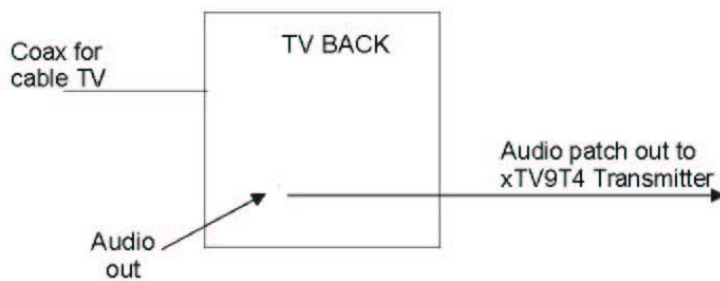

Attaching xTV Receivers

The xTV Receiver can be attached to virtually any piece of equipment.

- Attach the supplied coiled control cable into the RJ45 telephone connector on the back of the receiver, as shown below. Be careful to push the rubber boot firmly into the recess to form a tight seal around the connector. Failure to do this may void your warranty.



- Attach the supplied neoprene mounting pad to desired location on the exercise equipment.
- Align the xTV Receiver over the mounting pad on the handle or rail.
- Use two of the supplied plastic wire ties to attach the xTV Receiver to the handle or rail. Pull wire ties firmly to secure and cut off the excess.



This method may be used to mount an xTV Receiver either horizontally or vertically.

xTV9T4 Transmitter Setup

NORMAL OPERATION

There are four modes that the transmitter can be in:

xTV US/Canada	32 possible frequencies	LCS US/Canada	52 possible frequencies
xTV Australia	16 possible frequencies	LCS Australia	24 possible frequencies

Upon power up, the display will show '88.88' briefly as a lamp test, then display briefly one of the four shown below to indicate which of the four modes the transmitter is in:

xTV US/Canada	'07.76'	LCS US/Canada	'17.76'
xTV Australia	'09.01'	LCS Australia	'19.01'

Then the transmitter will enter normal operation, and the display will show '1 .NN' where NN is the frequency number assigned to that channel. Pressing the Transmitter up/down button will increment the display through the 4 available transmitters.

If there is not a frequency programmed for a transmitter, the two right digits on the display will be blank.

PROGRAMMING MODE

To enter programming mode, press and hold one of the four buttons while turning the power on. The display will show one of the following, depending on which button is held:

LCS US/Canada ('17.76')	Transmitter Up button	xTV US/Canada ('07.76')	Channel Up button
LCS Australia ('19.01')	Transmitter down button	xTV Australia ('09.01')	Channel Down button

Note: xTV US/Canada is the most common setting. LCS US/Canada and LCS Australia modes are only used with older Cardio Theater MaxJack and LCS receiver product lines (no longer in production). The two Australia modes are used for customers to limit the frequencies to legal channels used in that country.

The display will continue to show one of those four until the held button is released. Then the display will show '1.XX'. The 'XX's correspond to the channel that is currently set on the transmitter.

To program a channel number for a transmitter, press the channel up or down button to scroll through the available channels. When the desired channel number is displayed and is flashing, press and hold both the Channel up and Channel down buttons at the same time, then release. The channel number will now be on steady, signifying that channel is programmed for that transmitter.

You may 'unselect' a channel by the same method, and it will start blinking. A blinking channel number indicates that no channel is selected and that particular transmitter will be turned off when you get out of program mode. If you try to select a channel that is already selected by another of the four channels, your selection will be ignored and will revert back to default blinking '01'.

Use the Transmitter up/down buttons to move to the next transmitter you want to program and follow the same steps described above. Once you have selected the channels you want to transmit on, scroll through the four transmitters 1-4 using the Transmitter up or Transmitter down buttons, to check your selections. If a transmitter has a valid channel programmed, it will appear on the right side of the display, and be on steady. If not, it will default to '01' and be blinking. The transmitter will not allow you to use the same channel number twice.

To exit the programming mode and save your selections, press and hold both the Channel up button and the Transmitter down button at the same time, then release both buttons. The unit will automatically restart in normal operation, with the (new) programmed channels.

To exit without saving your changes, simply turn the unit off.

xTV9T4 Transmitter Frequency Chart

Cardio - United States		Cardio - Australia		xTV - United States		xTV - Australia	
<u>Frequency</u>	<u>Channel</u>	<u>Frequency</u>	<u>Channel</u>	<u>Frequency</u>	<u>Channel</u>	<u>Frequency</u>	<u>Channel</u>
905.4	01	916.2	01	905.0	01	923.6	01
907.4	02	917.4	02	906.2	02	924.4	02
909.0	03	918.0	03	923.6	03	925.6	03
910.4	04	919.4	04	924.4	04	917.0	04
911.2	05	920.2	05	925.6	05	917.8	05
912.6	06	922.4	06	910.6	06	919.0	06
914.2	07	924.0	07	911.8	07	920.6	07
915.4	08	925.0	08	913.4	08	921.4	08
916.2	09	922.0	09	914.2	09	922.6	09
917.4	10	923.6	10	915.4	10	916.2	10
918.0	11	926.2	12	917.8	12	918.4	12
920.2	13	920.6	13	919.0	13	919.6	13
922.4	14	921.6	14	920.6	14	921.0	14
924.0	15	923.2	15	921.4	15	921.8	15
925.0	16	925.8	16	922.6	16	923.0	16
906.4	17	915.8	17	905.6	17		
908.4	18	917.0	18	906.6	18		
909.8	19	918.4	19	907.6	19		
912.0	20	919.8	20	908.8	20		
913.0	21	919.0	21	910.0	21		
913.8	22	921.0	22	911.2	22		
915.0	23	922.8	23	912.4	23		
916.6	24	925.4	24	913.8	24		
922.0	25			915.0	25		
923.6	26			916.2	26		
924.4	27			917.4	27		
926.2	28			918.4	28		
920.6	29			919.6	29		
921.6	30			921.0	30		
923.2	31			921.8	31		
925.8	32			923.0	32		
915.8	33						
917.0	34						
918.4	35						
919.8	36						
919.0	37						
921.0	38						
922.8	39						
925.4	40						
910.8	41						
911.6	42						
913.4	43						
914.6	44						
903.6	45						
904.4	46						
905.8	47						
907.0	48						
904.0	49						
905.0	50						
907.8	51						
909.4	52						

Programming the Receiver

The procedure outlined below must be followed, to set up your receivers for first time use or anytime a receiver is replaced.

Make sure that all transmitters that will be used in the Club are on and operating before going through the programming procedures below.

Note: Make sure that you program the receivers in the same mode that the transmitters are set on.

Auto Program Mode:

1. The xTV receiver is a universal receiver that is capable of receiving the signal from other brands and models of transmitters that are out in the marketplace.

To activate auto program mode, press both the Volume Up and Volume Down buttons simultaneously for 3 seconds. When the display reads "P-" let go of the two buttons. The display will then read one of four numbers "-1", "-2", "-3", or "-4".

"-1" xTV program mode

"-2" Cardio Theater LCS program mode

"-3" Broadcast Vision program mode

"-4" 863Mhz program mode (**for overseas use only**)

2. Use the channel up or Channel down button to select the transmitter model or brand. The display will show one of the four numbers listed above.

It is important to use the appropriate program mode to be able to pick up all the available channels for a given transmitter brand.

3. Press the EQ / Tone button to begin programming. Scanning will take a few moments to lock in available transmitter channels.

When auto programming is complete, press channel Up and Down buttons to confirm all transmitters have been programmed. This feature can be effected by outside interference and may not automatically select all the available channels or may select undesired channels. If this happens, go into the manual program mode to add or delete channels as necessary.

Manual Program Mode:

Note: Auto program mode must be completed first or you will not be able to enter "Manual Mode"

1. To activate manual program mode, press Channel Up and Channel Down buttons simultaneously for 3 seconds. When the "P-" shows up on the display, release the two buttons. Channel number "1" will then be displayed.

A **flashing channel number** indicates that the channel is inactive and a **steady channel number** will indicate that the channel is active.

2. Use the EQ / Tone button to toggle the displayed channel number from either active or inactive as desired. Go through all channels and do the same as above.
3. When manual programming is complete, press Mute button to lock channels and return to normal operation.

Receiver Maintenance

Replacing a worn Headphone Jack Assembly

Remove receiver from the cardio equipment.

On the back of the receiver remove the two inner screws on the bottom of the receiver as shown below.

This will release the worn headphone jack assembly from the receiver.



Turn receiver over, remove the worn headphone jack assembly and discard. Replace it with a new assembly. Make sure that the replacement headphone jack fits squarely into the recess of the enclosure so that the spring-loaded contacts make full contact with the headphone jack assembly. Re-install the screws removed previously, while holding the headphone jack firmly in place.



Install the repaired unit back onto exercise equipment using new wire ties. Make sure receiver fits tightly on the neoprene mounting pad to prevent movement on the equipment.

Specifications

xTV9T4 –Transmitter

Transmission bandwidth.....	902 MHz to 928 MHz
Frequency Range.....	adjustable from 905.4 MHz to 926.2 MHz.
Available Channels.....	32 channels xTV mode, 52 Cardio LCS mode
Transmission Power.....	95 dbmv max.
Transmission Range.....	150 ft. from antenna
Power Consumption.....	25 watts max.
Audio Inputs.....	4
Dimensions.....	W: 19.00" / 48.26 cm
	H: 3.87" / 9.83 cm
	D: 14.75" / 37.46 cm
Weight.....	7.5 lbs. / 3.4 kg

xTV Receiver

Output Level / Load Impedance.....	550 mV / 32 Ohm.
Dimensions.....	W: 2.70" / 68.6 mm
	H: 4.25" / 108 mm
	D: 1.50" / 38 mm
Weight.....	3 oz / 85 g

Limited Warranty

PLEASE READ THESE WARRANTY TERMS AND CONDITIONS CAREFULLY BEFORE USING YOUR CARDIO THEATER PRODUCT. BY USING THE EQUIPMENT, YOU ARE CONSENTING TO BE BOUND BY THE FOLLOWING WARRANTY TERMS AND CONDITIONS.

Limited Warranty.

Precor Incorporated ("Precor") warrants all new Cardio Theater products to be free from defects in materials and manufacture for the warranty periods set forth below. The warranty periods commence on the invoice date of the original purchase. This warranty applies only against defects discovered within the warranty period and extends only to the original purchaser of the product. Parts repaired or replaced under the terms of this warranty will be warranted for the remainder of the original warranty period only. To claim under this warranty, the buyer must notify Precor or your authorized Cardio Theater dealer within 30 days after the date of discovery of any nonconformity and make the affected product available for inspection by Precor or its service representative. Cardio Theater products deemed defective by a Precor representative, will be issued a return authorization number. **Precor will not accept returns without a return authorization number.** Precor reserves the right, at their option, to repair or replace the product after verification of defect. Product that fails after the warranty period expires will be repaired or replaced at the current part and labor pricing after authorization from the customer. Repairs are warranted for 90 days. Precor's obligations under this warranty are limited as set forth below.

Warranty Periods and Coverage.

• Cardio Theater Transmitters xTV-T Wireless or Wired Floor Models xTVFM system transmitter	3 Year	Parts & Labor
• Cardio Theater Receivers XTV-R Wireless or Wired Upper Models XTVFM system receiver	1 Year	Parts & Labor
• Cardio Theater LCD Screen (PVS)	1 Year	Parts & Labor
• Cardio Theater Screen Controllers	1 Year	Parts & Labor
• Quick Change Headphone Jack	90 Day	Parts Only
• Optional DVD Player	1 Year	Parts

Conditions and Restrictions.

This warranty is valid only in accordance with the conditions set forth below:

- The warranty applies to the Cardio Theater product only while
 - it remains in the possession of the original purchaser and proof of purchase is demonstrated,
 - it has not been subjected to accident, misuse, abuse, improper service, or mechanical, electrical or non-Precor modification,
 - claims are made within the warranty period.
- This warranty does not cover damage or product failure caused by electrical wiring not in compliance with electrical codes or Precor owner's manual specifications, or failure to provide reasonable and necessary maintenance as outlined in the owner's manual. **This warranty excludes misuse or failures of, for example, poor quality CD's, multiple discs inserted in the player, failures caused by home-produced copies of discs, etc.**
- Except in Canada, Precor does not pay labor outside the United States.
- Warranties outside the United States and Canada may vary. Please contact your local Dealer for details.

This Limited Warranty shall not apply to:

- Software (PROM) version upgrades.
- Normal wear and tear, consumables and cosmetic items, including, but not limited to the following: labels.
- Repairs performed on Cardio Theater products missing a serial number or with a serial tag that has been altered or defaced.
- Service calls to correct installation of the product or instruct owners on how to use the product.
- Pickup and delivery involved with repairs.
- Any labor costs incurred beyond the applicable labor warranty period.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer of the product could void the user's authority to operate the product.

Complete this portion and keep for your records.

Purchased From: _____ Example: Dealer or store name.
Phone Number: _____ Example: Dealer or store telephone number.
Product/model: _____ Example: Transmitters, Receivers
Serial number: _____
The serial number is found on the shipping container or item.

Disclaimer and Release.

The warranties provided herein are the exclusive warranties given by Precor and supersede any prior, contrary or additional representations, whether oral or written. ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE THAT APPLY TO ANY PARTS DESCRIBED ABOVE ARE LIMITED IN DURATION TO THE PERIODS OF EXPRESS WARRANTIES GIVEN ABOVE FOR THOSE SAME PARTS. PRECOR HEREBY DISCLAIMS AND EXCLUDES THOSE WARRANTIES THEREAFTER. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. PRECOR ALSO HEREBY DISCLAIMS AND EXCLUDES ALL OTHER OBLIGATIONS OR LIABILITIES, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, WITH RESPECT TO ANY NONCONFORMANCE OR DEFECT IN ANY PRODUCT, INCLUDING BUT NOT LIMITED TO: (A) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN TORT, WHETHER OR NOT ARISING FROM THE NEGLIGENCE OF PRECOR OR ITS SUPPLIERS (WHETHER ACTIVE, PASSIVE OR IMPUTED); AND (B) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY FOR LOSS OF OR DAMAGE TO ANY PRODUCT. This disclaimer and release shall apply even if the express warranty set forth above fails of its essential purpose.

Exclusive Remedies.

For any product described above that fails to conform to its warranty, Precor will provide, at their option, one of the following: (1) repair; (2) replacement; or (3) refund of the purchase price. Limited Warranty service may be obtained by contacting the authorized dealer from whom you purchased the item. Precor compensates Servicers for warranty trips within their normal service area to repair commercial product at the customer's location. You may be charged a trip charge outside the service area. THESE SHALL BE THE SOLE AND EXCLUSIVE REMEDIES OF THE BUYER FOR ANY BREACH OF WARRANTY.

EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES.

PRECOR AND/OR ITS SUPPLIERS SHALL HAVE NO OBLIGATION OR LIABILITY, WHETHER ARISING IN CONTRACT (INCLUDING WARRANTY), TORT (INCLUDING ACTIVE, PASSIVE, OR IMPUTED NEGLIGENCE AND STRICT LIABILITY), OR OTHERWISE, FOR DAMAGE TO THE PRODUCT, PROPERTY DAMAGE, LOSS OF USE, REVENUE OR PROFIT, COST OF CAPITAL, COST OF SUBSTITUTE PRODUCT, ADDITIONAL COSTS INCURRED BY BUYER (BY WAY OF CORRECTION OR OTHERWISE) OR ANY OTHER INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM NONDELIVERY OR FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. This exclusion applies even if the above warranty fails of its essential purposes and regardless of whether such damages are sought for breach of warranty, breach of contract, negligence, or strict liability in tort or under any other legal theory. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Effective 21 January 2005
P/N CX30037-101

Technical Support

Technical Support Number

Telephone 1-800-776-6695

Technical Support Hours:

7:00 AM to 3:30 PM Monday through Friday PST

Write to:

Cardio Theatre Holdings, Inc.
20031 142nd Ave. NE
Woodinville, WA 98072-4002

Notice

Due to continuing advancements in technology, Cardio Theatre Holding, Inc. reserves the right to make changes in hardware, packaging, and any accompanying documentation without prior written notice.

Cardio Theater PVS and Cardio Theater Quick Change Headphone Jack are registered trademarks of Cardio Theatre Holdings, Inc.

© 2004 Cardio Theatre Holdings, Inc., all rights reserved